


INSTALLATION and OPERATION INSTRUCTIONS

The Big Climber is designed to create an exciting, fun-filled play environment for your children. So that all children who use the Big Climber can play securely, we ask that the adults who supervise play on the Big Climber, follow these important guidelines for the unit's use and care:

1. Place the unit on level ground, at least 6 feet (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical lines.
2. Do not install the Big Climber over concrete, asphalt, packed earth, or any other hard surface. A fall from the unit can result in serious injury to the equipment user.
3. The Big Climber must be used only with its anchor stakes and straps in place. Install the stake anchors at a 90° angle to the ground (as illustrated in #9 of the assembly instructions) to provide maximum stability for the unit. Drive the stakes in to ground or near-ground level so that they will not present a hazard for children who run or play around the unit. Because of varying soil conditions, you may find it necessary to purchase longer or heavier stakes at your local hardware or building supply store. **DO NOT** allow children to play on the Big Climber until it is fully assembled and the anchor straps and stakes are securely installed.
4. The Big Climber was designed to accommodate 4 children, or a total of 240 lbs., at a time.
5. As with all play equipment, an adult should supervise children's play on the Big Climber, instructing children not to use the equipment in any manner not intended, and not to climb on the equipment when it is wet or snow-covered. Adults supervising play should insure that children are dressed appropriately in well-fitting clothes and shoes, and are not wearing potentially hazardous scarfs, ponchos, or other loose-fitting clothing. If the Swing Extension (7301) is attached, children should be instructed not to walk close to the moving swing, not to twist the swing ropes, not to swing the empty seat, not to get off the swing while it is in motion, and to sit in the center of the swing with their full weight on the seat.
6. Check all connections and screws twice monthly during the usage season and at the beginning of each season for tightness, and tighten as required. Do not allow children to play on the unit when the temperature is below freezing (32°F). If the Swing Extension is attached, check the swing seat and ropes monthly during the usage season for signs of deterioration. If replacement becomes necessary, please call us at 1-800-347-8372.
7. When you decide to dispose of the Big Climber, disassemble and dispose of it in such a way that no unreasonable hazards exists. STEP2's products are level 4 recyclable plastics; please recycle if possible.


For assistance call 1-800-347-8372.

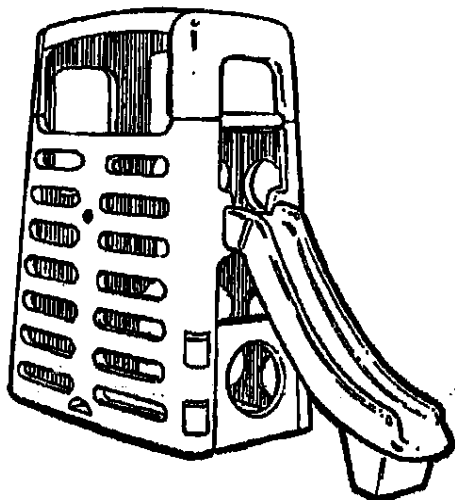


A STEP BEYOND.

**Step2 Corporation
10010 Aurora-Hudson Road
Streetsboro, OH 44241 USA
1-800-347-8372**

1. Attach the LADDER to the WALL WITH THE SLOTS by inserting the 3 tabs on the LADDER into the 3 holes on the WALL from the inside as shown. Then rotate the LADDER outward until both surfaces are flush.

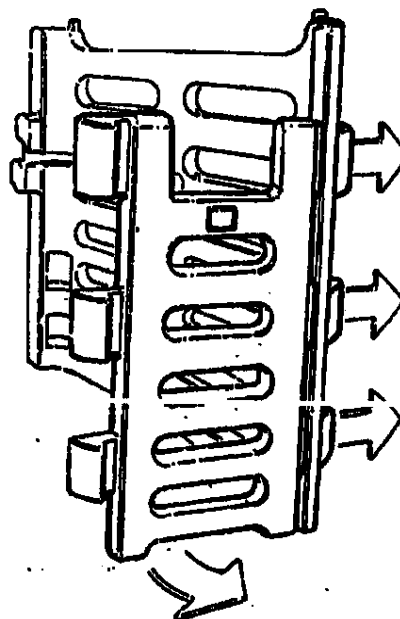


2. Attach the WALL WITH THE CIRCLES to the LADDER by placing the WALL as close to the other WALL as shown and inserting the 3 tabs on the LADDER through the 3 holes on the WALL.

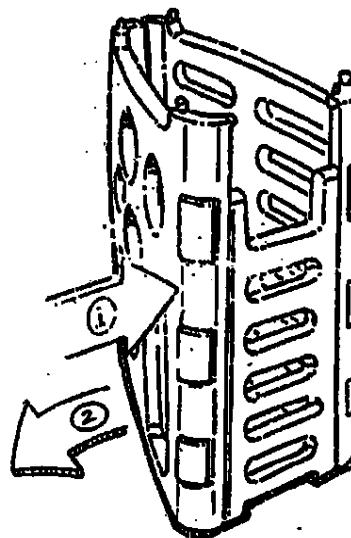

Now rotate the WALL outward until the LADDER and the WALL are flush.


3. Insert the PLATFORM into the unit by spreading the WALLS outward and sliding the PLATFORM into the inside slot on the WALLS.

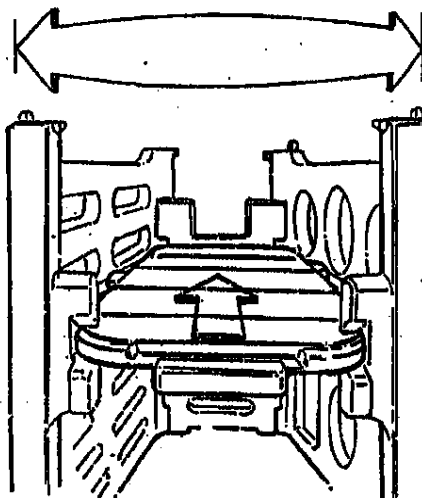

NOTE: Be sure the posts, on either side of the PLATFORM engage into the corresponding holes in the SIDE WALLS.


4. Attach the LOCKING PANEL into the assembly by inserting it from the inside into the holes at the lower front of the unit and then sliding it downward.

NOTE: The 2 WALLS must be spread out and then brought inward while inserting the LOCKING PANEL.


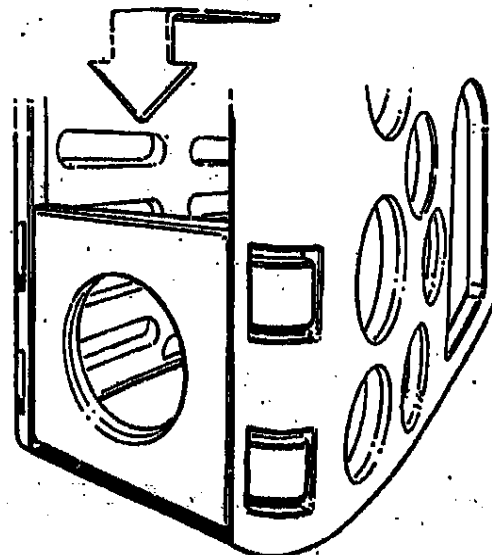


5. Attach the **SLIDE** to the unit by raising the front of the unit upward 4 inches and rotating the **SLIDE** into the unit as shown.


NOTE: Be sure that that both **WALLS** of the unit are tight against the platform. before inserting **SLIDE**.

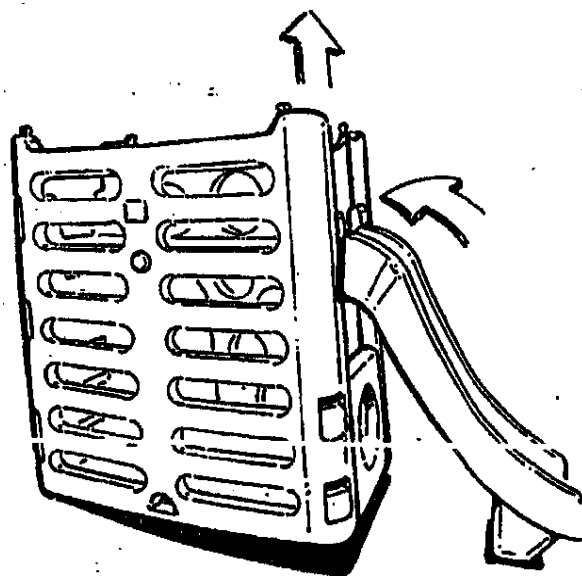

6. Attach the **SUPPORTS** to the **ROOF** by placing the **ROOF** on the ground, inserting the tabs on the **ROOF** through the openings on the **SUPPORT** at an angle, and then rotating the **SUPPORT** upward until a "POP" is heard. Repeat this procedure with the other **SUPPORT**.

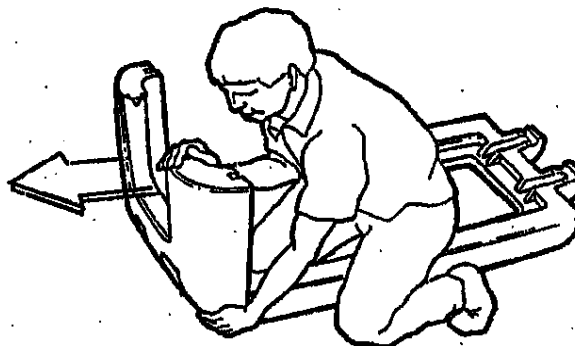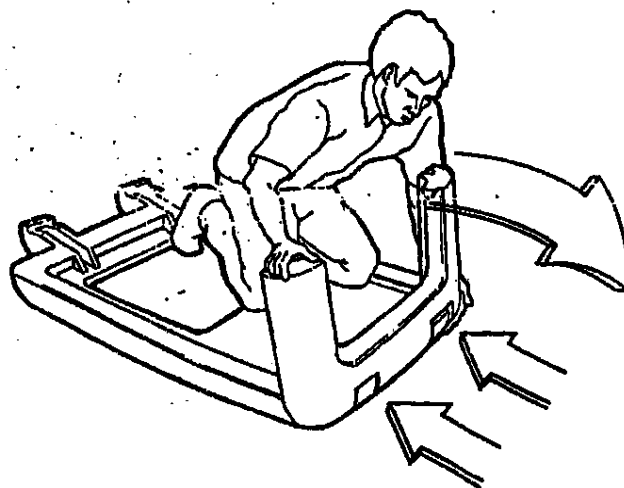


7. Attach the **ROOF ASSEMBLY** to the **BASE UNIT** by sliding the pocket at the bottom of each **SUPPORT** onto its corresponding post on the **BASE UNIT**. These pockets can only be inserted

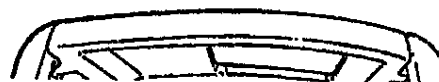


7. Attach the ROOF ASSEMBLY to the BASE UNIT by sliding the pocket at the bottom of each SUPPORT onto its corresponding post on the BASE UNIT. These pockets can only be inserted onto the posts from the outside of the unit as shown. Some stretching of the ROOF ASSEMBLY is normal in order to insure a tight fit.

NOTE: The skylight is intended to be located nearest the LADDER.

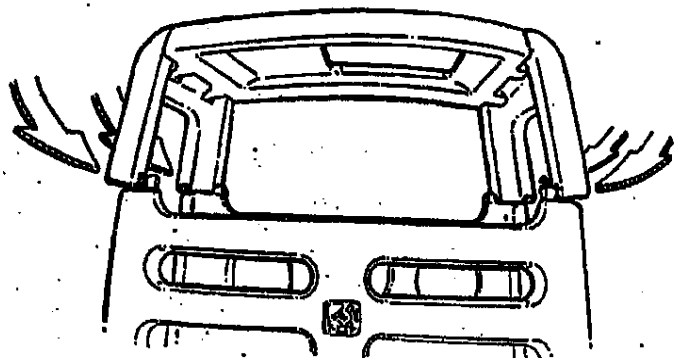


8. Attach the RETAINING BARS to the unit by placing one end over the cylindrical detail and then stretching the unit outward enough to get the bar onto the other detail.

9. Secure the RETAINING BARS to the pegs on the walls with the four self-topping screws enclosed.

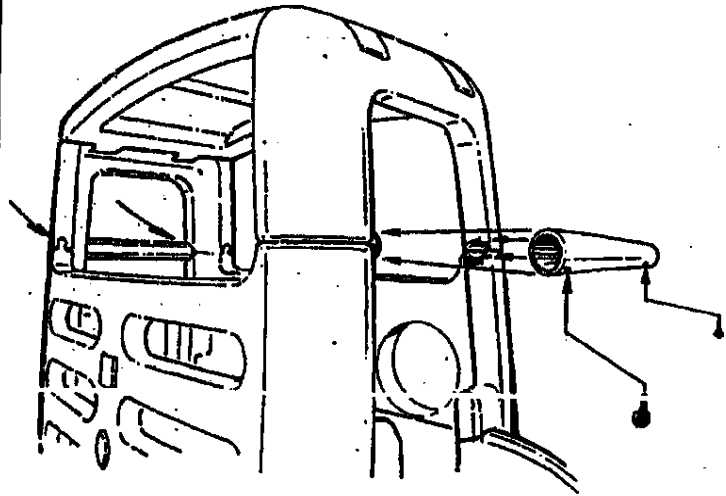

10. The BIG CLIMBER should always be used on a flat level surface.

Straps and stakes have been provided to anchor the product to the ground. Due to the varying soil conditions in which they will be used you may need to use heavier or longer stakes which can be purchased at your local building supply store.

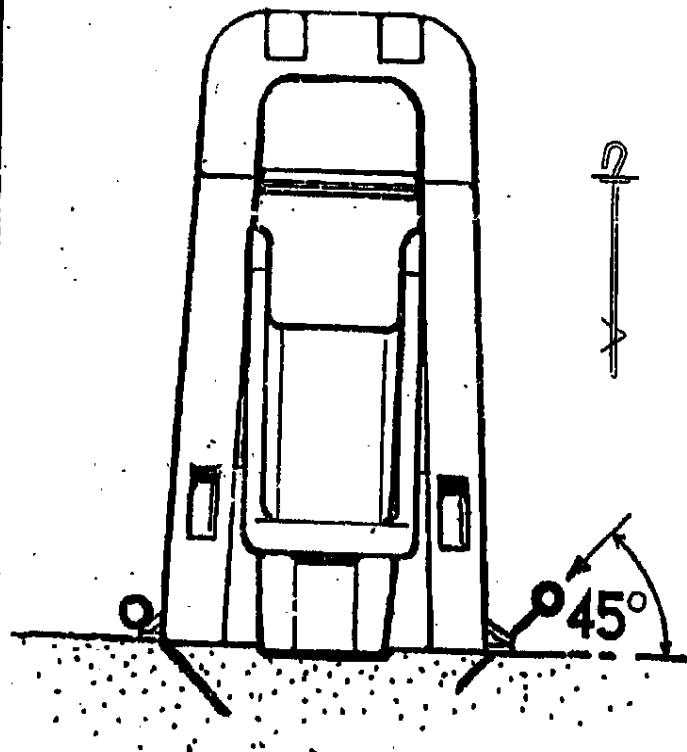

SWING EXTENSION™

7301 Installation and Operation Instructions

We at STEP 2 have designed the Swing Extension to create an exciting, fun-filled play environment. So that all children who use the Swing Extension can play securely, we ask that the adults who supervise play on the Swing Extension follow these important guidelines for the unit's use and care:

1. Place the unit on level ground, at least 6 feet (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical lines. The unit should be installed only as an addition to the STEP 2 Big Climber.
2. Do not install the Swing Extension over concrete, asphalt, packed earth, or any other hard surface. A fall from the unit can result in serious injury to the equipment user.
3. The Swing Extension must be used only with its anchor stakes and straps in place. Install the stake anchors at a 90° angle to the ground (as illustrated in #9 of the assembly instructions) to provide maximum stability for the unit. Drive the stakes in to ground or near-ground level so that they will not present a hazard for children who run or play around the unit. Because of varying soil conditions, you may find it necessary to purchase longer or heavier stakes at your local hardware or building supply store. Do not allow children to play on the Swing Extension until it is fully assembled and the anchor stakes are securely installed.
4. The Swing Extension was designed to accommodate a child up to ten years of age.
5. As with all play equipment, an adult should supervise children's play on the Swing Extension, instructing children not to use the equipment in any manner not intended, and not to climb on the equipment when it is wet or snow-covered. Adults supervising play should insure that children are dressed appropriately in well-fitting clothes and shoes, and are not wearing potentially hazardous scarfs, ponchos, or other loose-fitting clothing. Children should be instructed not to walk close to the moving swing, not to twist the swing ropes, not to swing the empty seat, not to get off the swing while it is in motion, and to sit in the center of the swing with their full weight on the seat.
6. Check all connections and screws twice monthly during the usage season and at the beginning of each season for tightness, and tighten as required. Do not allow children to play on the unit when the temperature is below freezing (32°F). Check the swing seat and ropes monthly during the usage season for signs of deterioration. If replacement becomes necessary, please call us at 1-800-347-8372.
7. When you decide to dispose of the Swing Extension, disassemble and dispose of it in such a way that no unreasonable hazard exists. STEP 2's products are level 4 recycable plastics; please recycle if possible.

For assistance call 1-800-347-8372.

Please save this sheet for future reference.

SWING EXTENSION™

 
 

7301

STEP 2 Corporation
10010 Aurora-Hudson Road
Streetsboro, OH 44241 USA
1-800-347-8372

Important
Because some of the component parts
of this product are small, assembly
should be done by an adult.
Tools needed: Pliers

important
Étant donné que certaines des pièces
de ce produit sont très petites,
l'assemblage devrait être fait
par un adulte.
Outils Requis: Pinces

Importante
Un adulto debe montar porque
algunos de los partes de este producto
son pequeños.
Implemento Requerido: Alicates

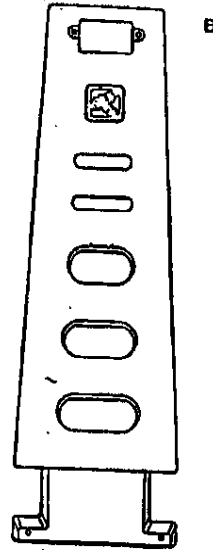


4



6



2

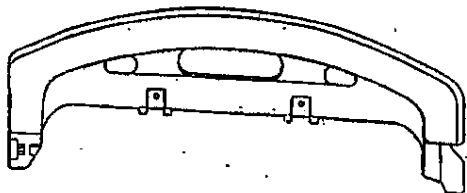

C

